

# COBRA<sup>®</sup> Deadman Installation Guide

## Parts Included



## Tools Required




## STEP BY STEP INSTALLATION


**Step 1)** Remove the four screws from the back of the 18R2 enclosure.





**Step 2)** Unplug the battery harness and USB harness.

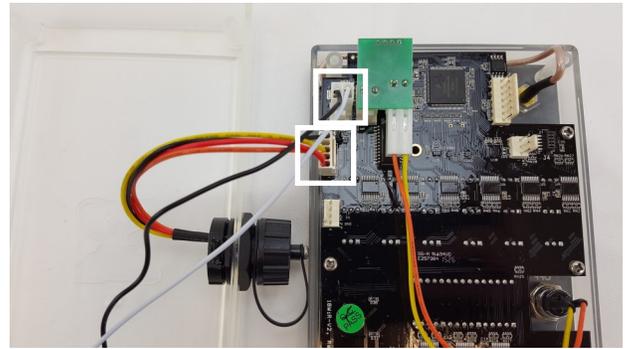


**Step 3)** Unscrew the USB cap and nut. Then push the USB port inward to remove it from the 18R2 back enclosure.

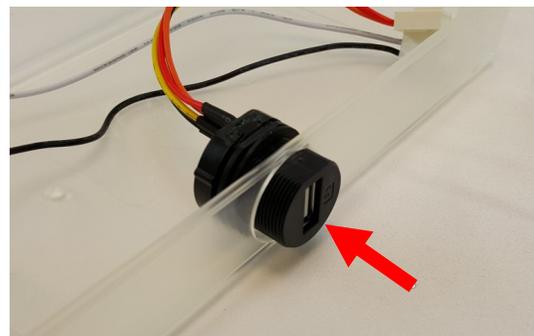


**Step 4)** Insert the USB port, flat side up, into the new 18R2 back enclosure. Then, screw on the nut and USB cap.

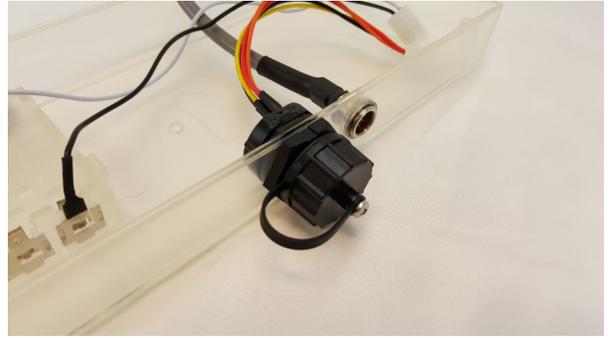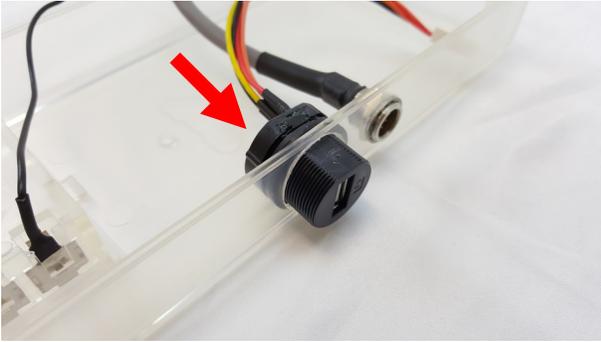

**Step 5)** Plug the battery harness and USB port harness back into 18R2.

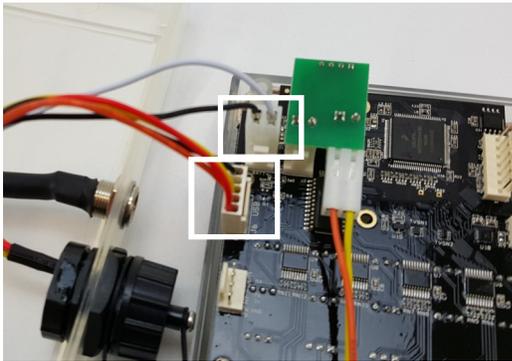

**Step 6)** Plug the Deadman board into the 18R2.

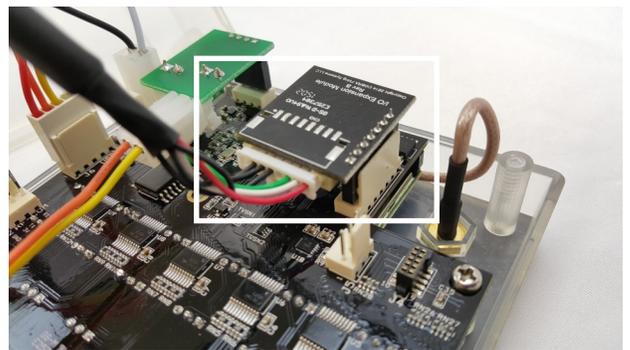

**Step 7)** Re-insert the 4 screws into the back of the 18R2 enclosure. Do not overtighten.



**Step 8)** Insert the Deadman trigger into the Deadman port, button side up. You're now finished installing your Deadman!

