

Parts Included



Tools Required




STEP BY STEP INSTALLATION

Step 1) Remove the six screws from the front of the Audio Box faceplate. Then, remove the Audio Box from the armored case.



Step 2) On the left side of the armored case, measure and mark 1 3/8" from the left and right side of the case.

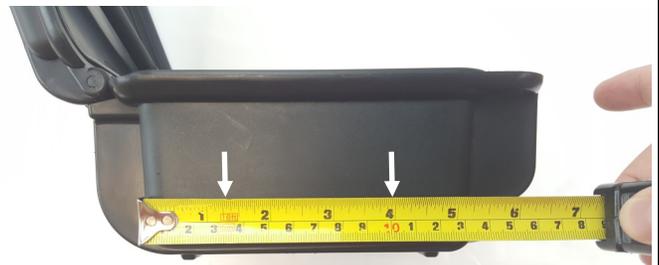

Step 3) Measure 1 1/2" down from the bottom lip of the armored case.



Step 4) Drill hole into the left side of case using 13/16" spade bit. Repeat for right side.



Step 5) Insert XLR board through hole in the side of the armored case.



Step 6) Use drill to insert screws into top left and bottom right of each XLR connector.



Step 7) Connect cables to XLR connectors as shown below.



Step 8) Disconnect J5 cable (1/4" Jack Cable) from Audio Box.



Step 9) Connect the cable that was previously plugged into J5, into male XLR cable.



Step 10) Connect the 6" XLR cable into the J5 connector on the Audio Box board.



Step 11) Re-install the six screws of the front of the Audio Box.

Congratulations, you are now finished with the XLR installation